



QUALITY ACCESSORY



## Instructions for use:

- 1) Press the "ON" button until LCD display is activated.
- 2) Press "ON" button again to change readout from PSI to BAR or KPA.
- 3) Remove tyre valve dust cap.
- 4) Place gauge nozzle onto valve until a good seal is achieved (ie. no air escaping).
- 5) Remove nozzle from valve and read gauge.
- 6) Replace tyre valve dust cap.

➤ Gauge will switch off automatically after 90 seconds.

➤ Alternatively, press "ON" button for 5 seconds until LCD display de-activates.

# MP7925



## CAUTION

Always adhere to your vehicle manufacturer's recommended tyre pressures. Do not immerse this gauge in water or use in wet conditions. The batteries are the only user replaceable component in this product. Only suitable for use 0-40°C



RECYCLE

Manufactured on behalf of




LIMITED

Birmingham

[www.maypole.ltd.uk](http://www.maypole.ltd.uk)

[email:sales@maypole.ltd.uk](mailto:sales@maypole.ltd.uk)

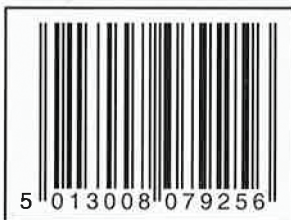

5 013008 079256

Made in China