



(1) Position the arms of the clamp to their maximum open position (in the direction of the arrows shown). Loosely fit the main wheel clamp security plate behind the clamp arms. Position the clamp so the stand rests on the ground. Make sure both tyre arms are tight against the tyre.

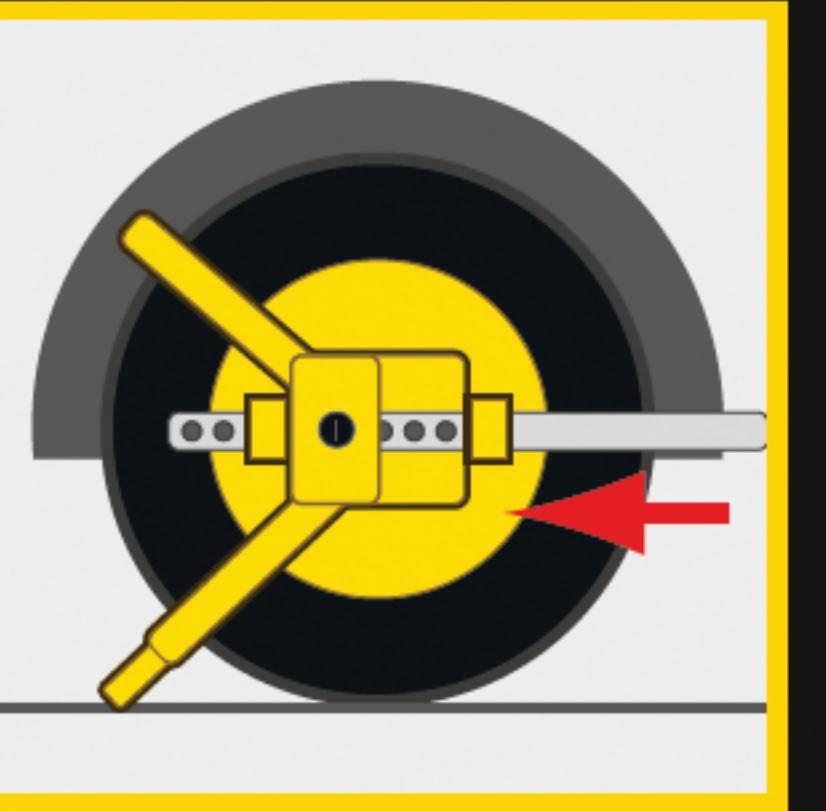

(2) Insert the locking arm through the locking plate (in the direction of the arrow), selecting the hole which gives the most secure fit to the wheel (this will depend on tyre width). Push the arm until a tight fit around the wheel is achieved.

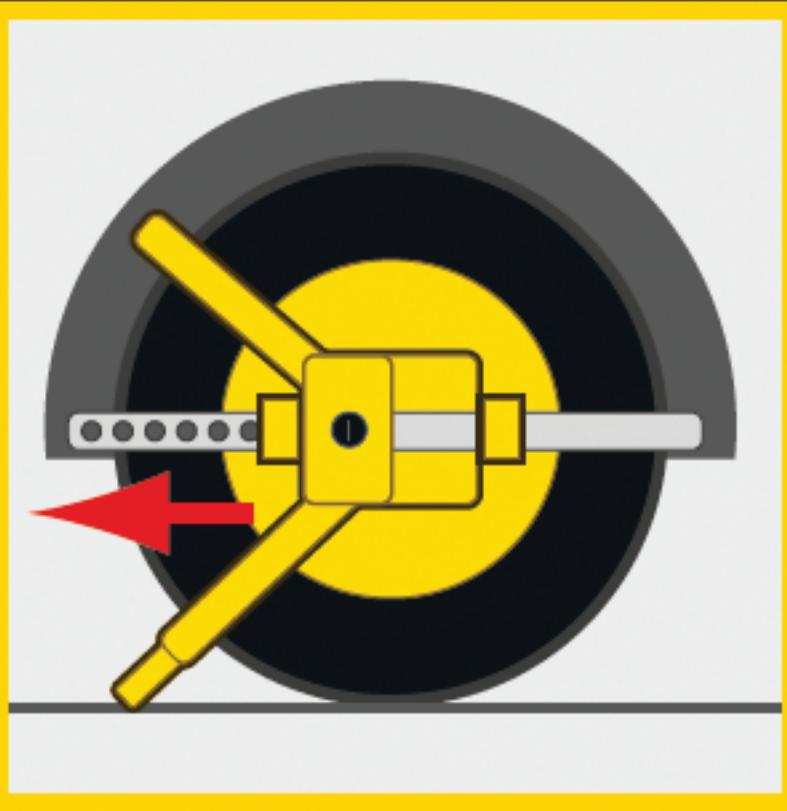

(3) With the wheel clamp in position, lock into place using the key. To remove the clamp, unlock with the key, then reverse the process.



Warning: Do not attempt to move the vehicle with the clamp fitted.