
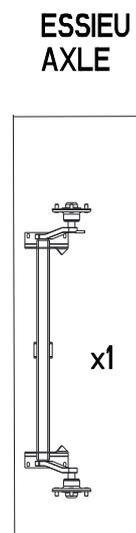
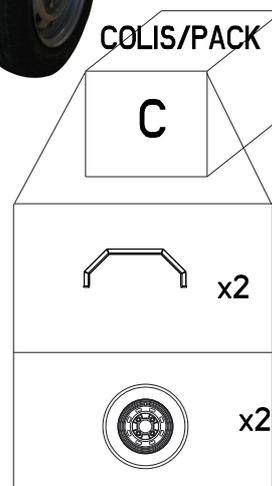
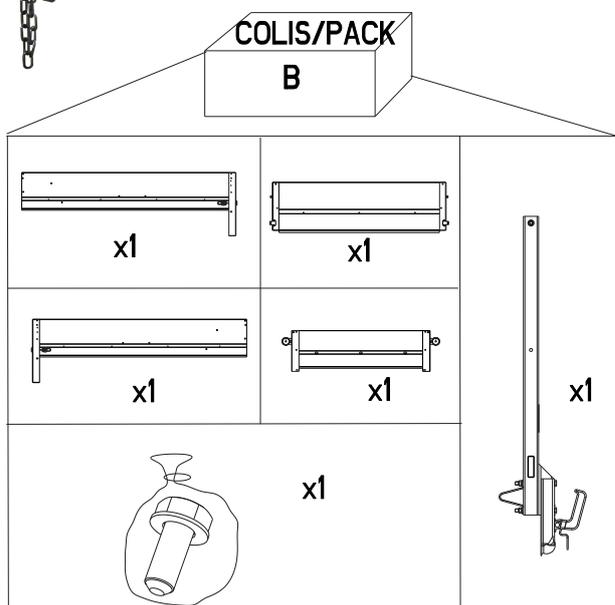
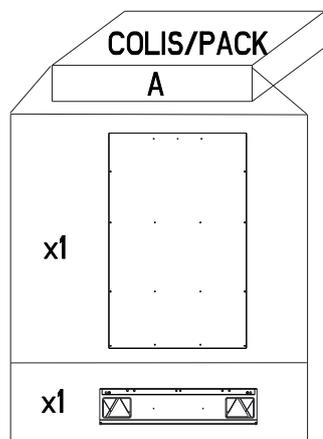



NOTICE DE MONTAGE ASSEMBLY INSTRUCTIONS

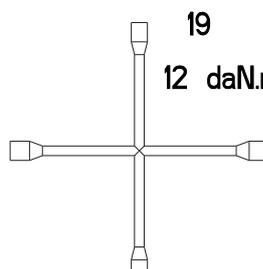


 **PORTER DES GANTS POUR LE MONTAGE.**
IT IS RECOMMENDED TO WEAR GLOVES FOR ASSEMBLY.

OUTILS NECESSAIRES POUR LE MONTAGE NON FOURNIS NECESSARY TOOLS FOR ASSEMBLY. NOT PROVIDED	 10 0.8 daN.m
	 13 1.8 daN.m
	 17 3.6 daN.m
	 19 12 daN.m

A

A1: MODELE/model 210-230

	x4	HM 12x30
	x4	Ø12
	x4	Ø12

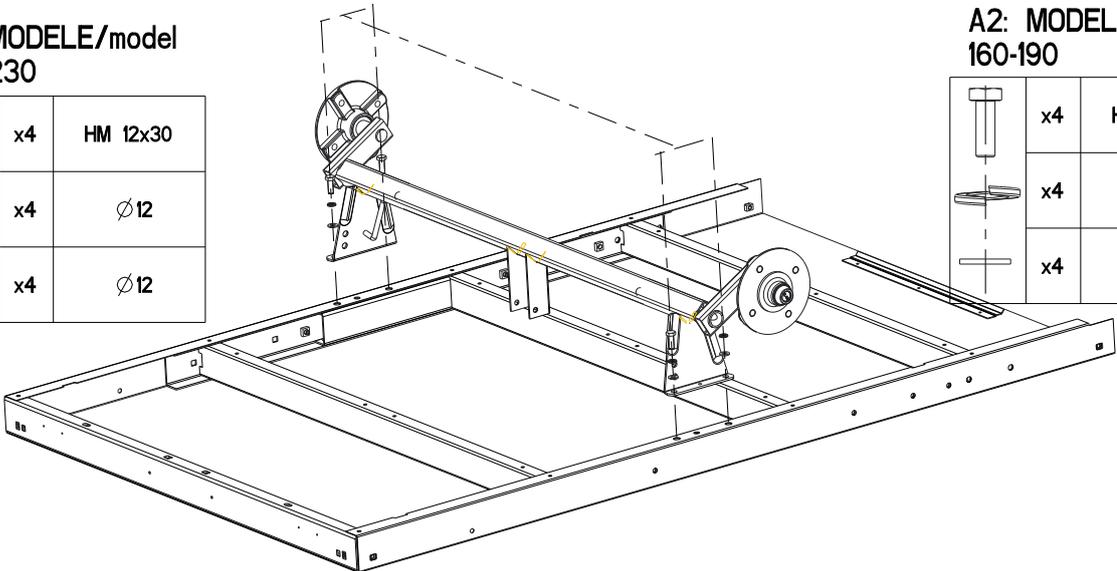


A2: MODELE/model 160-190

	x4	HM 10x30
	x4	Ø10
	x4	Ø10


A3: NE PAS BLOQUER LES FIXATIONS
DO NOT TIGHTEN NUTS AND BOLTS AT THIS STAGE

B


1

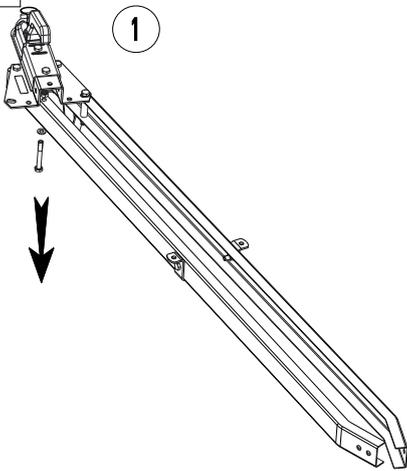

2

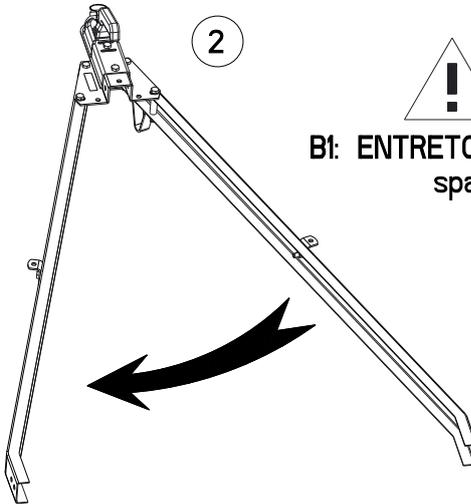

3

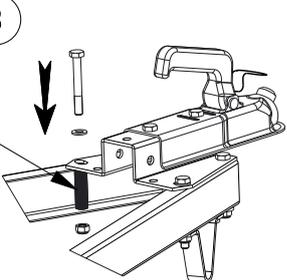



B1: ENTRETOISE spacer

C

C1: MODELE/model 190-210-230

		
x2	x2	x2
HM12x30	Ø12	FR HM12


C2: CLIPPER LE FAISCEAU
CLIP THE WIRES



C3: JAUNE/YELLOW

2 ou/or 4
CLIP

C4: VERT/GREEN

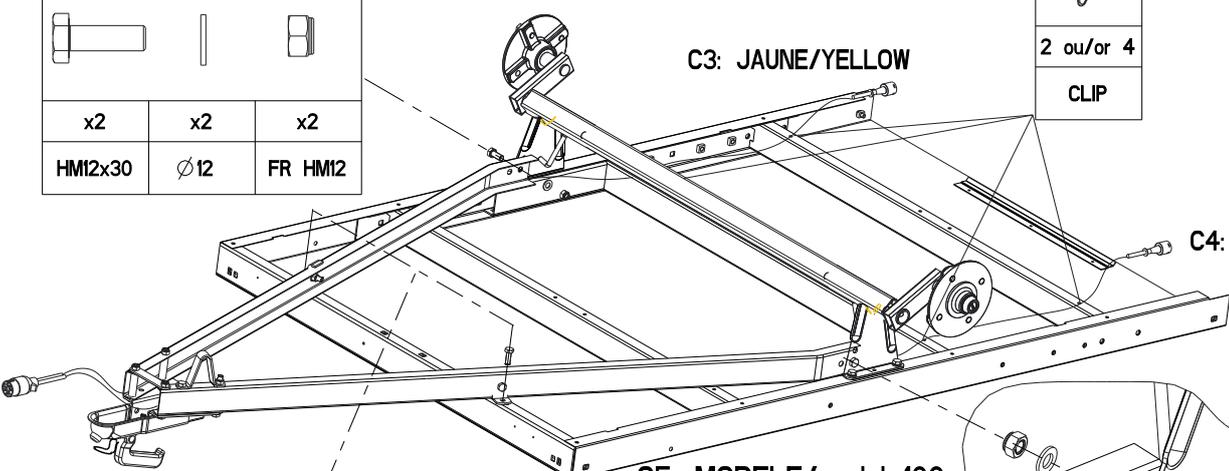


C5: MODELE/model 160

	x2	HM 10x30
	x2	FR HM10

C6: ENTRETOISE spacer

			
x2	x2	x2	x2
HM 12x60	C6 ENTRETOISE spacer	Ø12	FR HM 12

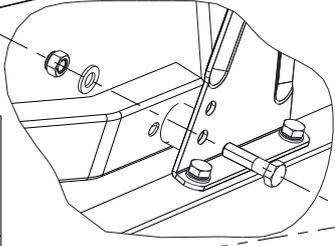

C7: BLOQUER LES FIXATIONS APRES CETTE OPERATION
TIGHTEN ALL NUTS AND BOLTS AFTER THIS OPERATION

